

Brand	Codes
Abex	4021, 0401
Acer	4001, 3291
Acme	0471
ADA	0461
ADC	1661, 1431
Admiral	4991, 1661, 1441, 0681, 0371
Advent	4931, 2891, 2131, 0871, 0631, 0581, 3261
Adventura	0151
Aiko	4321, 1011
Aiwa	4801, 4731, 1411, 0931, 0651, 0411
Akai	5171, 5141, 4461, 4151, 4141, 1901, 0781, 0351, 0331, 3111, 3215
Alleron	1711
Amark	1441
Ames	1275
Amtron	2191
AMW	0825, 0645
ANABA	1375
Anam National	3431, 2331, 2191, 2151, 1941, 0271
AOC	4261, 4221, 0611, 0391, 1221, 0891, 0251, 0011, 0001
Apex	5111, 4841, 2911, 1891, 1105, 1025, 0671, 0431, 0425, 0375, 0245, 0191, 0045
Archer	1441
Aspect	1271
Audiovox	4521, 4051, 4031, 2451, 2191
Aurora	3061
Axion	0881
Bang & Olufsen	1591
Belcor	0001
Bell & Howell	3421, 1691, 1661, 1421, 1261
BenQ	3871, 2221, 1761, 1741
Bluesky	3921, 3511
Bradford	2191
Broksonic	4951, 1631, 0851, 0371, 0211
Brokwood	0001

Brand	Codes
Candle	1221, 0961, 0151, 0001
Capehart	4221, 0391
CCE	3721
Celebrity	1901
Celera	0191
Centrios	1361
Centurion	1221
Cetomer	2961, 2901, 1631, 0001
Cetronic	1941
Changhong	4841, 1891, 0191
Chimei	3071
Cineral	4321, 3511
Citizen	4321, 2191, 1941, 1661, 1381, 1311, 1011, 0961, 0371, 0351, 0251, 1221, 0001
Clairtone	0011
Classic	4841, 1941, 1891, 0191
CLP	0061
CLP Classic	0161, 0041, 0001
COBY	5191, 5091, 2551, 2541, 2531, 2521, 2511, 3351
Color voice	1431
Colortyme	1431, 1221, 0001
Concerto	1221, 0001
Concierge	1781, 1771
Contec	2191, 1941, 1911, 0011
Cornea	1471
Craig	2191, 1941
Crosley	1961
Crown	2191, 1941
CTX	1441
Curtis Mathes	5351, 5371, 4941, 4011, 3421, 1691, 1661, 1551, 1421, 1311, 1261, 1191, 0351, 0261, 0001
CXC	2191, 1941
Cybervision	3511
Daewoo	4681, 4321, 2181, 1941, 1561, 1551, 1521, 1431, 1251, 1231, 1221, 1081, 0971, 0831, 0721, 0591, 0251, 0221, 0001
Daytron	1221, 0001

Brand	Codes
Dell	3811, 3601, 3441, 2041, 1401, 0981
Diamond Vision	4811, 4771, 2001, 1611, 1211
Digimate	4301
Digistar	3901, 3881, 3811, 2471, 2451, 1061, 0871, 0581, 0381
Dimensia	3421, 1691, 1421
Dish Network	5491
Disney	1101, 0371
Distar	3231
Dukane	1981, 1271
Dumont	1781, 1771, 0001
Durabrand	5121, 2291, 2271, 1381, 0921, 0861, 0371
Dynasty	1941
Dynex	5311, 4761, 4731, 3841, 3761, 2921, 2271, 2241, 1381, 1241, 0921, 0871, 0701, 0581, 0371, 3161, 3141, 2891
Electroband	1901, 0001
Electrohome	3431, 2151, 1921, 1221, 0001
Elektra	1661
Element	5411, 5361, 4111, 2401, 1741, 2891
Elite Video	0901
Emerson	5341, 5221, 5231, 4911, 4831, 4761, 4751, 4731, 4701, 3451, 2361, 2191, 2171, 1941, 1931, 1711, 1701, 1681, 1631, 1611, 1461, 1451, 1371, 1261, 1251, 1221, 0931, 0851, 0741, 0731, 0701, 0691, 0451, 0441, 0371, 0291, 0281, 0271, 0041, 0031, 0021, 0001
Envision	5401, 4261, 3751, 1221, 0071, 0001
ESA	1381
Fisher	5001, 3481, 1911, 1581, 1531, 1261, 1161
Fluid	2431, 2421, 2401
Fujitsu	4341, 4241, 1711, 0901
Funai	4761, 4731, 2191, 1941, 1711, 1381, 0931, 0701
Futuretec	2191, 1941
Gateway	0501
GE	4921, 4011, 3431, 3421, 2111, 1951, 1921, 1691, 1421, 0811, 0791, 0361, 0261, 0141, 0051, 0041, 0001
Gibraltar	1781, 1771, 0001
Gold Star	4731, 1911, 1501, 1221, 1181, 0931, 0761, 0611, 0251, 0001

Brand	Codes
GPX	4701
Gradiente	3961, 3951, 3661, 2291, 0001
Grundy	2191, 1711
Guestvision	1861
Gvision	4871
Haier	4851, 3831, 2891, 1741, 0921, 0861, 0671
Hallmark	1221, 0001
Hannspree	5461, 5451, 5291
Harvard	2191
Hauppauge	3791
Hello Kitty	5391
HP	4881, 3491
Hisense	5331, 4671, 4391, 4381, 3671, 2211, 2081, 1741, 0671, 2891
Hitachi	4731, 4331, 4121, 3621, 2051, 1981, 1911, 1801, 1751, 1721, 1661, 1481, 1371, 1271, 1221, 1041, 0931, 0841, 0001
Hyundai	4651
ILO	5171, 5141, 5031, 4231, 3691, 2481, 2391, 1971, 1381, 1141, 3215
IMA	2191
Infinity	4791, 1961, 1171
InFocus	3421
Initial	5041, 5031, 4821, 4231, 2481
Insignia	5181, 5061, 5051, 4761, 4721, 4371, 3841, 3761, 2921, 2271, 2241, 1381, 1241, 0921, 0871, 0701, 0581, 0371, 2891, 1741
Integra	1841
Inteq	1781, 1771
ISymphony	3041
Janeil	0151
JBL	1961
JC Penney	4011, 3421, 1951, 1921, 1911, 1691, 1451, 1421, 1311, 1221, 0961, 0811, 0791, 0351, 0261, 0251, 0051, 0001
JCB	1901
Jensen	2271, 1221, 0001
JVC	5281, 5071, 4201, 4121, 2751, 2381, 1911, 1801, 1481, 1281, 0941, 0901, 0771, 0481, 0311, 1741, 2891
Kawasaki	4741
Kawasho	1901, 1221, 0001

Brand	Codes
Kaypani	4221, 0391
KEC	2191, 1941
Kenwood	1221, 0001
KLH	0191
Kloss Novabeam	1021, 0151
Kogi	4871
Konka	5441, 4971, 4901, 4621, 2371, 2241, 2191, 2121, 1671, 1241, 0751, 0521, 0471
KTV	2191, 1941, 1681, 1491, 0011
Kurazai	1661
KWorld	2931
Lasonic	4811, 1611, 1211
Legend	0581
LG	5501, 5511, 5271, 3311, 3281, 3221, 3091, 3021, 3001, 1741, 2891, 4731, 1911, 1501, 1471, 1221, 1181, 0931, 0761, 0611, 0251, 0131, 0001
Liquidvideo	1111, 0881
Lodgenet	4091, 3421, 1691, 1661, 1421
Loewe	1961, 1871
Logik	3421, 1691, 1661, 1421
Luce	0301
Luxman	1221, 0001
Lxi	4731, 4011, 3421, 1961, 1691, 1421, 1311, 1261, 1221, 0931, 0811, 0261, 0001
Magnasonic	1711
Magnavox	4991, 4791, 4761, 4641, 4191, 2321, 1961, 1801, 1221, 1171, 1021, 0961, 0701, 0681, 0321, 0001, 1741, 2891
Majestic	3421, 1691, 1661, 1421
Manhattan	5381
Marantz	1961, 1841, 1221, 0001
Maxent	3361, 0501
Medion	2351, 1141, 1101
Megatron	1271, 1221, 0001
Mei	0011
Memorex	5001, 4251, 3421, 1661, 2401, 1711, 1691, 1631, 1421, 1261, 1221, 1161, 0371, 0211, 0001

Brand	Codes
MGA	1921, 1911, 1801, 1711, 1581, 1221, 0251, 0001
Midland	4011, 1781, 1771, 1691, 0811, 0261, 0051
Mintek	4231
Minutz	1951
Misakai	1381
Mitsubishi	3271, 2701, 1921, 1811, 1801, 1711, 1581, 1221, 0251, 0001
Monivision	0491
Montgomery Ward	3421, 1691, 1661, 1421
Moteva	3661, 1261
Motorola	3431, 2151, 1441
MTC	1311, 1221, 0351, 0251, 0011, 0001
Multitech	2191
Multivision	0081
Myron & Davis	2101
NAD	4021, 0401, 1311, 1221, 0001
NEC	4401, 3431, 1841, 1801, 1431, 1221, 0341, 0251, 0001
Net TV	0501, 0121
Nexxtech	1201, 0871
Nikei	1941
Nikko	4321, 1221, 1011, 0001
Niko	3581
Norcent	2181, 0671, 0511
NTC	4321, 1011
Olevia	5151, 5161, 5151, 2781, 2771, 2431, 3081
Oncommand	3991, 1861
Onking	1941
Onkyo	3101
Onn	1741, 2891
Onwa	2191, 1941
Optimus	5201, 4691, 4021, 3551, 1881, 1571, 0401, 0201
Optoma	2441, 3121
Optonica	1441, 0341
Orion	1781, 1771, 0371, 0281

Brand	Codes
Panasonic National	5481, 5201, 4861, 4781, 4691, 3771, 3551, 3431, 2801, 2711, 2151, 1961, 1881, 1831, 1651, 1491, 1091, 0951, 0201, 0051
Philco	3431, 2941, 2321, 1961, 1801, 1671, 1221, 1021, 0961, 0251, 0321, 0001
Philips	4761, 4191, 3981, 3971, 3911, 3861, 3591, 3541, 3431, 2151, 1961, 1801, 1601, 1391, 1381, 1171, 1151, 1021, 0961, 0911, 0791, 0701, 0541, 0421, 0181, 0001, 1741, 2891
Philips Magnavox	4991, 4791, 3591, 2321, 1961, 1171, 0911, 0681, 0181
Pilot	0001
Pioneer	4661, 4021, 1981, 1841, 1511, 1371, 1221, 0401, 0001
PIVA	5021, 2411
Planar	4251
Polaroid	5131, 4631, 3741, 2401, 2311, 2271, 2081, 1241, 0581, 0191
Portland	1551, 1221, 1081, 1011, 0251, 0001
Precision	0621
Price Club	0351
Prima	3011, 2451, 0871, 0631, 0581, 0381
Princeton Graphics	1441, 1301
Prism	0051
Proscan	4011, 3421, 2301, 2061, 1691, 1421, 0811, 0261
Proton	4271, 4221, 4211, 2231, 1911, 1221, 0641, 0391, 0001
Protron	4301, 3731
Proview	2431, 2421, 2401
Pulsar	1781, 1771, 0001
Pyle	3331
Quasar	5201, 4691, 3551, 3431, 2151, 1961, 1881, 1831, 1571, 1491, 1091, 0201, 0051
Radio Shack	4921, 4731, 3421, 2191, 1941, 1911, 1701, 1691, 1571, 1421, 1261, 1221, 1001, 0931, 0341, 0141, 0001
RCA	4921, 4011, 3431, 3421, 2951, 2851, 2301, 2251, 2151, 2111, 2061, 2011, 1921, 1851, 1691, 1521, 1421, 1371, 1331, 1221, 1131, 1001, 0891, 0811, 0551, 0361, 0261, 0251, 0141, 0091, 0001, 1741, 2891
Realistic	4731, 3551, 3421, 2191, 1941, 1911, 1701, 1691, 1571, 1421, 1261, 1221, 1001, 0931, 0341, 0141, 0001
Rhapsody	0011
Roku	1741, 2891

Brand	Codes
Runco	1841, 1781, 1771
Sampo	4221, 1911, 1221, 0501, 0391, 0121, 0001
Samsung	5471, 5521, 5471, 4941, 4011, 3561, 3471, 2721, 2141, 2071, 1911, 1501, 1311, 1221, 1191, 0781, 0711, 0571, 0531, 0351, 0261, 0251, 0101, 0001
Samsux	1221
Samtron	0351
Sansui	5551, 1631, 0371, 0211
Santeca	0171
Sanyo	5261, 5251, 5241, 5001, 3481, 2881, 1911, 1581, 1531, 1261, 1161, 1051, 0801, 0001, 1741, 2891
Sceptre	5111, 4071, 3521
Scotch	1221, 0001
Scott	5141, 3215, 2191, 1941, 1711, 1221, 0281, 0021, 0001
Sears	4761, 4011, 3481, 3421, 1961, 1911, 1711, 1691, 1581, 1531, 1381, 1311, 1291, 1261, 1221, 0811, 0701, 0351, 0261, 0211, 0001
Selectron	2501, 2491, 2471
Semp	3611
Sharp	5421, 4991, 4751, 3461, 2261, 2201, 2031, 1441, 1291, 0681, 0461, 0341, 1221, 0001, 1741, 2891
Shogun	0001
Signature	3421, 2171, 1691, 1661, 1421
Signet	2861, 2821, 2811
Simpson	0961
Sonic	0011
Sony	5321, 4981, 4101, 3891, 3531, 2741, 2161, 1901, 1731, 1641, 1071
Soundesign	2191, 1941, 1711, 1221, 0961, 0001
Sova	4431, 3631
Soyo	5101, 4611
Spectra	1611
Spectravision	2341
Squareview	1381
SSS	2191, 1941, 0001
Star Sight	0061
Starlite	2191
Superscan	4761, 2021, 1291, 0701
Supersonic	4701, 0241

Brand	Codes
Supra	1991, 0001
Supremacy	0151
Supreme	1901
SVA	2101, 0671
Sylvania	4761, 4731, 3701, 2321, 1961, 1821, 1381, 1221, 1021, 0961, 0931, 0701, 0371, 0321, 0001
Symphonic	4761, 4731, 2191, 1381, 0931, 0701, 0021
Syntax	5161, 5151, 2431
Tandy	1441
Tatung	3431, 2151, 1741, 1141
TCL	4921, 3571, 3431, 3421, 2301, 2111, 2061, 2011, 1851, 1691, 1421, 0091, 1741, 2891
Technics	0051
Techwood	1221, 0051, 0001
Teknika	3421, 2191, 1941, 1911, 1711, 1691, 1661, 1571, 1421, 1311, 1221, 1011, 0961, 0351, 0251, 0151, 0001
Telecaption	0821
Telerent	3421, 1691, 1661, 1421
Tera	0641, 0001
Tevion	1141
TMK	1221, 0001
Toshiba	5531, 5081, 4941, 4891, 3551, 2691, 1911, 1841, 1801, 1621, 1571, 1541, 1351, 1261, 1121, 0821, 0351, 0341, 0231, 0211, 1311, 3211
Trutech	4551, 3821, 2461
Universal	1951, 0791
Venturer	3781
Victor	4121, 1481
Videocon	4061
Vidtech	1221, 0251, 0001
View Sonic	5301, 4281, 3801, 3751, 1981, 0501
Viking	0151
Viore	5431, 3681, 2841, 2831
Visteon	3411
Vizio	5711, 5701, 5691, 5681, 5671, 5661, 5651, 5641, 5631, 5621, 5611, 5601, 5591, 5581, 5571, 5561, 4081, 3851, 3741, 3651, 2021, 1741, 2891

Brand	Codes
Wards	3421, 1961, 1951, 1711, 1691, 1321, 1661, 1421, 1221, 1021, 0961, 0791, 0341, 0321, 0251, 0021, 0001
Westinghouse	3851, 3711, 2281, 1901, 0111, 3251, 3241, 1741, 2891
White-Westinghouse	4731, 3641, 1551, 1501, 1521, 1081, 0931, 0601
Yamaha	3551, 1571, 1221, 0251, 0001
Zenith	5271, 5281, 5211, 4991, 4751, 4731, 4321, 4201, 3501, 2291, 2171, 1791, 1781, 1771, 1751, 1661, 1471, 1251, 1221, 1191, 1181, 1171, 1081, 1031, 1011, 0991, 0941, 0931, 0691, 0681, 0371, 0131, 0061, 0001